



## REN


### Tread Brush Restorative Deep Cleaning

FOR ESCALATORS AND TRAVELATORS

We understand many escalators are very dirty and not ready for easy maintenance cleaning. They need restorative, deep cleaning before you can begin a regular maintenance program using REN pads.

The REN Tread Brush and gives you the low-cost ability to deep clean and restore your escalators.

**The REN Tread Brush is a universal fit designed to work on all escalator treads.**

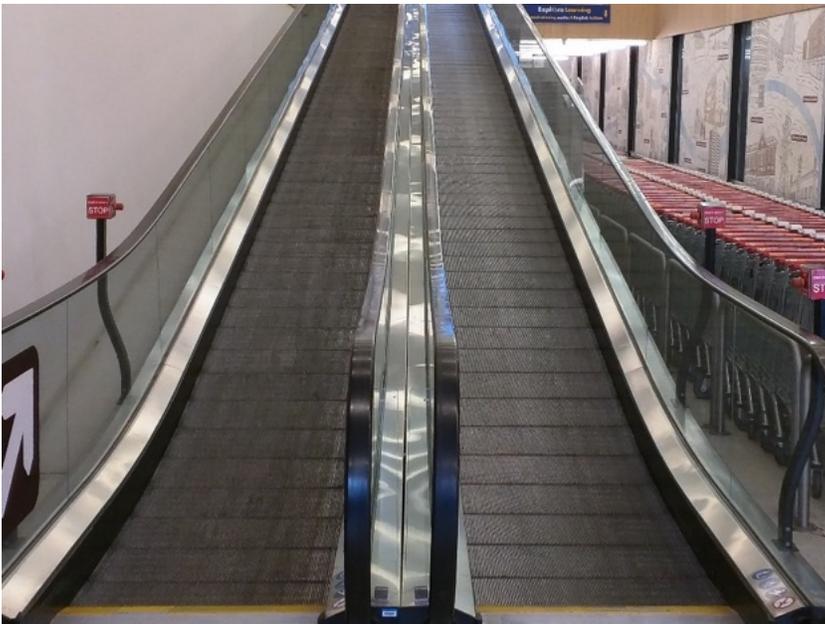

### Items required:

- REN Tread Brush (size 24" 32" 40")
- REN RESTORE solution CS-20-00
- REN Head Unit & Saturation Tub
- REN Pads (V or W or other)
- Portable vacuum

### 3 Easy Steps

1. Dry REN Tread Brush cleaning
2. Wet REN Tread Brush cleaning
3. REN Pads final cleaning



## REN

### Tread Restorative Deep Cleaning


#### Step 1

#### Dry REN Tread Brush

Dry REN Brush must be used first, DO NOT use RESTORE liquid.

Using dry, the REN Tread Brush will loosen and collect dirt and dust.

Multiple dry REN Tread Brush applications must be used to achieve best results.

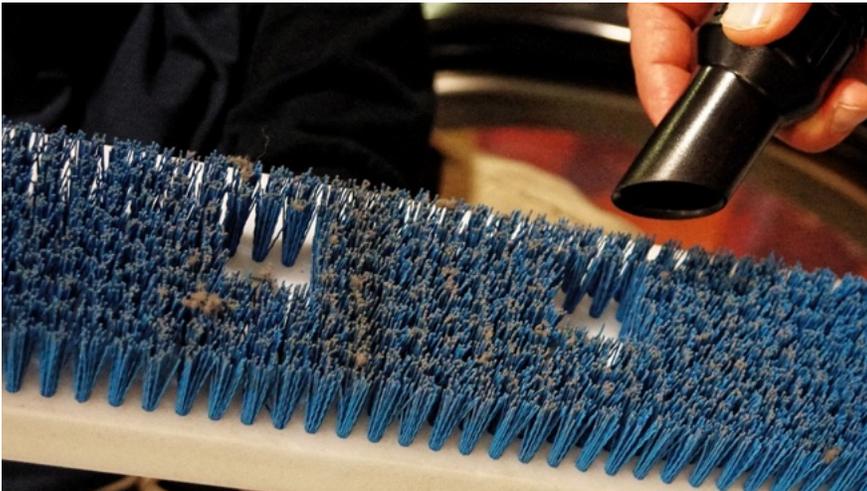


1. Place REN Tread Brush on the oncoming escalator, keep the brush level.
2. Using slight downward pressure, keep in place for five (5) minutes.
3. Remove REN Tread Brush from the tread, vacuum the dirt and dust collected on the REN Tread Brush, or with a small wire brush, gently remove dust and dirt.
4. Repeat the dry REN Tread Brush process until no longer picking up dirt.



## RESTORE cleaning solution

Safe, effective deep cleaning of all escalators. The NO DRIP formula stays where you spray, clings to surfaces. When sprayed through a nozzle, RESTORE converts into a micro gel and sticks to the surface.

Will not drip into the escalator mechanicals or chain drive system.

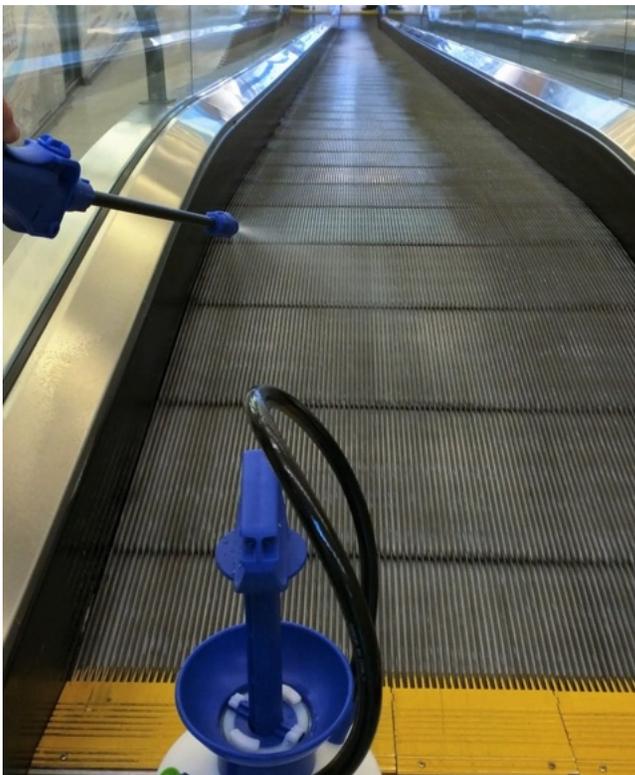

## REN

### Tread Restorative Deep Cleaning

#### Step 2

#### Wet REN Tread Brush

The escalator is now free of loose dirt and dust; however embedded, stubborn dirt and grease remain on the treads. Spraying RESTORE onto the treads will help break the bonded dirt and grease.

Using REN Tread Brush with RESTORE will bring up the deep dirt and grease into a liquefied sludge.

1. RESTORE no drip formula liquid sprays into a micro gel and will not drip into the escalator.
2. Using a spray bottle, apply the undiluted RESTORE onto the entire escalator tread surface, focusing on stains.
3. Place REN Tread Brush on the oncoming escalator, keep the brush level.
4. Using slight downward pressure to the REN Tread Brush, keep in place for five (5) minutes.
5. Remove REN Tread Brush from the tread, vacuum or rinse as needed.
6. Repeat as required. For difficult remaining stains, use REN Riser Brush (RB-10) to spot scrub difficult stains.



## REN

### Tread Restorative Deep Cleaning

#### **Step 3**

#### REN DRY PAD FINAL CLEANING

The REN Tread Brush cannot pick up and remove the liquefied dirt from the tread grooves.

REN Pads wipe, absorb and lift away the remaining dirt and grime, leaving a perfectly restored, clean tread surface. Using REN pads dry will absorb the RESTORE liquid applied to the escalator.

Multiple dry pads may be needed to achieve final cleaning and drying. 2 to 4 pads, depending on the remaining dirt. Pads can be washed and reused.



1. Place a dry REN pad onto the head unit, white side mounts first.
2. Apply the pad onto the oncoming escalator placing the back edge of the pad into the tread grooves, then drop the pad front edge, self-aligning the pad into the grooves.
3. Using downward pressure, keep in place for five (5) minutes.
4. Remove dirty pad, it can be washed and rinsed for reuse.
5. Repeat until additional pads no longer collect dirt.

# REN Clean

Escalator Cleaning Tools



<u>PART NUMBER</u>	<u>ITEM</u>
TB-24-00	Tread Brush 24 inch



<u>PART NUMBER</u>	<u>ITEM</u>
CS-20-00	RESTORE micro gel - no drip cleaner



<u>PART NUMBER</u>	<u>ITEM</u>
VS-24-00	V - REN Pad 24 inch
VS-32-00	V - REN Pad 32 inch
VS-40-00	V - REN Pad 40 inch
WO-24-00	W -REN Pad 24 inch
WO-32-00	W – REN Pad 32 inch
WO-40-00	W – REN Pad 40 inch



<u>PART NUMBER</u>	<u>ITEM</u>
HS-24-00	Pad Holder & tub 24 inch
HS-32-00	Pad Holder & tub 32 inch
HS-40-00	Pad Holder & tub 40 inch

<u>PART NUMBER</u>	<u>ITEM</u>
TH-10-00	Telescoping Handle